

 翰優企業有限公司  
Hain-Yo Enterprises Co., Ltd  
UPPER SEALING TYPE VALVE INSTRUCTION

**MODEL NUMBER : GH16GJ**

**DESCRIPTION :** GH16GJ is 25mm Upper Sealing Type with distributor.

**FUNCTION :**

1. Low torque with upper sealing structure is simple. The appearance of the faucet can be processed to raise the spout, thereby making the faucet become more beautiful. Also, it can also be used with a side outlet faucet. Turning on the valve and rotating the spindle with lever, the ceramic disc is moved by rotor and joined with spindle to control cold-warm-hot water outlet.
2. The angle of spindle from close to fully open is  $22^{\circ}$ . The rotary direction of the cold water is counter clockwise with  $0^{\circ}\sim 50^{\circ}$ ; vice versa, the rotary direction of hot water is clockwise with  $0^{\circ}\sim 50^{\circ}$ . (Fig 1)

**INSTALLATION :**

1. Make sure the proper position of hot/cold water supply pipes before installing the valve.
2. After confirming the right side is cold water supply and the left is hot water supply, then fit two set points on the bottom of the valve into the bores of faucet body, and fasten both of them with nut. (Fig 1)
3. The nut lock torque suggested : 70kgf-cm~80kgf-cm.
4. The hot/cold water supply condition suggested :  $3.9^{\circ}\text{C}\sim 82^{\circ}\text{C}(39^{\circ}\text{F}\sim 180^{\circ}\text{F})$
5. Recommended Water Pressure (MAX.) : 500PSI
6. After finishing assembly, turning on the faucet and rotating the lever from right to left, make sure it is cold water, warm water and then hot water incoming.

